

3LOBITE®

SCREWLESS EXTENSION JOINT

INSTALLATION GUIDE

JUST FOR QUALIFIED TECHNICIANS

1



WHAT DO YOU NEED?

- Wood drill diam. 16mm (non for Longoni cues).
- Tap M17x1.5mm.
- Wood flat-drill diam. 18mm.
- Epoxy glue for metal (or cyanoacrilic glue).
- Mechanical precision lathe (40mm passing rod).

All tools could be purchased by Longoni dealers as "3lobite setup kit" (art. I4532).

Installation has to be made only by qualified technicians.


2



VERIFY SIZE OF YOUR CUE BUTT:


- 28mm, the minimum butt external diameter.
- 16mm, the maximum diameter of the existing bumper.

3

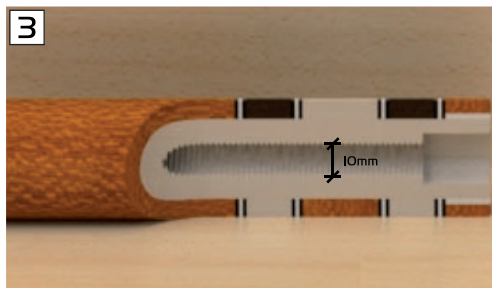

To maintain the possibility of changing weights, remove the bumper and check the diameter of the weight bolt. It must not exceed 10mm to pass into the 3lobite hole.

4

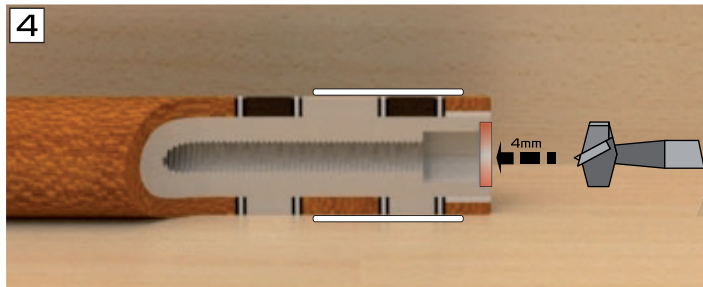

Put the butt into the lathe with the plastic bush being sure not to scratch the varnish. Drill slowly and costantly the hole for 4mm.


for more info visit

WWW.LONGONICUES.COM/3LOBITE

75th
1945-2020

LONGONI
MADE IN ITALY SINCE 1945


5

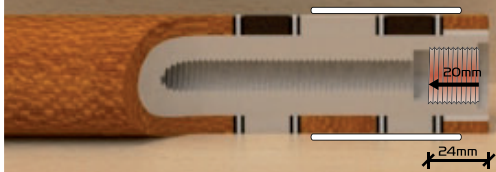

Thread the hole for 20mm, checking that the tool enter straight in the center.

MADE IN ITALY SINCE 1945


6

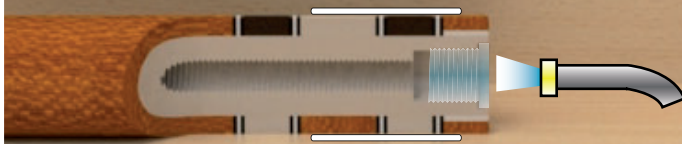

Clean perfectly the hole with compressed air. Check if the 3Lobite component can easily enter till the end by hand without glue.

MADE IN ITALY SINCE 1945

7

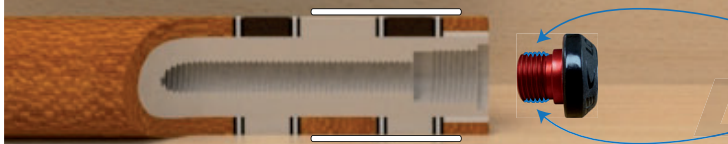

Put 977 glue all around 3Lobite component thread and screw it.

MADE IN ITALY SINCE 1945

8



Insert 3Lobite core with bumper (use extension to screw it) and wait 10 min until glue is completely dried.

MADE IN ITALY SINCE 1945


9

Your cue is ready. It's time to win the game with your 3Lobite system!



MADE IN ITALY SINCE 1945

10

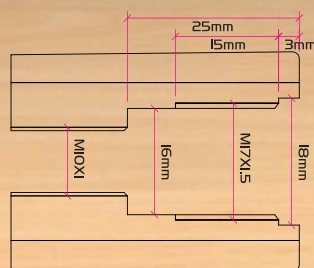

3LOBITE®
SCREWLESS EXTENSION JOINT

Setup drawing

MADE IN ITALY SINCE 1945